




DT Tornado System

Installation & Maintenance Guide

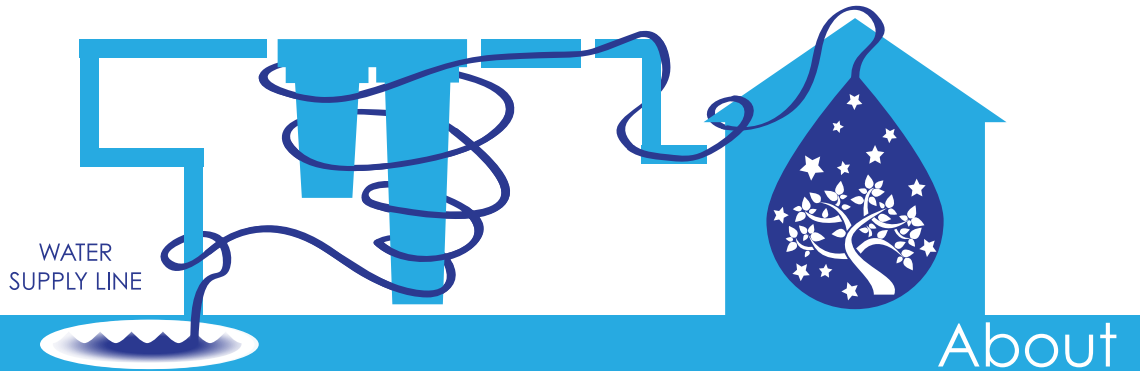

The DT Tornado System is a three-part, point of entry filtration system for your whole house. It is capable of handling all of your water filtration needs for in and around the home. The entire Tornado System may be installed either indoors or outdoors. The Tornado unit itself, may even be installed above ground or below ground. Installation is simple and maintenance is easy with the DT Tornado System.

Installation

Your system will arrive fully assembled and ready for installation. Each component of the DT Tornado System utilizes $\frac{3}{4}$ -inch connections of all inlets and outlets. Any necessary gauge conversions for compatibility can be made by a plumber and all types of piping for water supply may be used (PVC, copper, PEX, etc.). Simply feed your property's cold water supply line into the system and out of the Tornado into your home for the best water filtration of your entire residence—all without the use of salts or harmful chemicals that many other systems employ.

PLEASE TAKE THE PROPER PRECAUTIONS:

For optimal system installation and operation, please use a professional, licensed plumber.



Maintenance

Depending on the particular configuration of your system, various filters will have different life spans. The sediment filter will work with ideal results anywhere from 1 month to 6 months. The life of all filters depends on your particular water quality and usage. Poor water quality and high volume consumption will lead to a quicker depletion of filters and require more frequent replacement. When it's time to change the filters, simply open the plastic housing with the included wrench by turning clockwise and close it again by turning counterclockwise.