




FILTER INSTALLATION FOR EXISTING REVERSE OSMOSIS SYSTEM

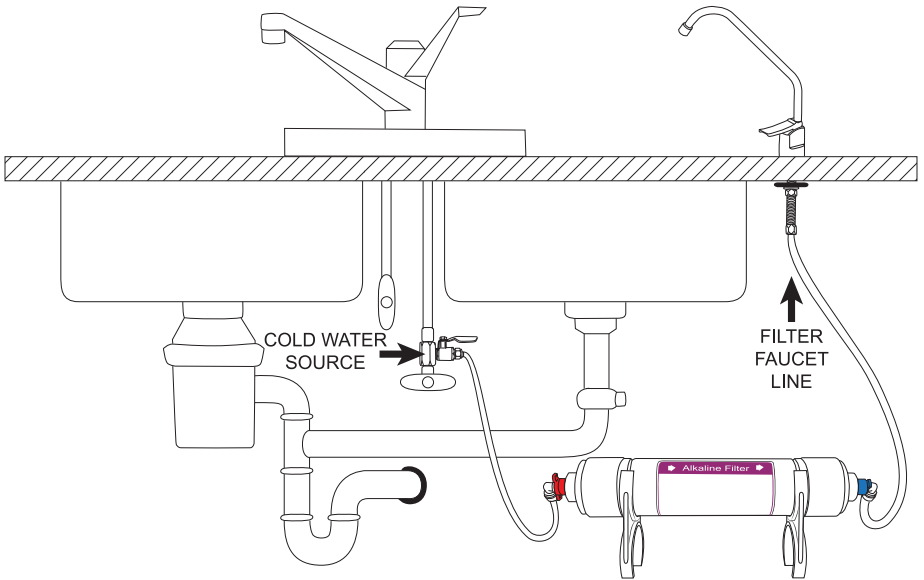

Dream Tree Alkaline Filter may be added to any existing reverse osmosis system—regardless of the current setup's manufacturer. Simply install under sink for the added health benefits of alkaline water in your home.

INSTRUCTIONS:

- 1 Turn off water source to sink
- 2 Insert RED connector line of alkaline filter into cold water source using quick release connector
- 3 Attach BLUE connector line to filter faucet line using quick release connector
- 4 Turn Water source on and check for leaks
- 5 Filter may be mounted or rest on floor. DO NOT pinch water lines

Small Tornado unit may be added to amplify oxygen in water, reduce bacteria in water line, and reduce odor.

Dream Tree Family

Tel: 1-888-618-5950 • Fax: 713-988-8839 • E-mail: support@DreamTreeFamily.com