




ALKALINE REFRIGERATOR FILTER INSTALLATION GUIDE

Example set up has been simplified for clarity. Individual installation situations will vary by home. ½ inch holes may need to be drilled through cabinet walls to feed water lines to the back of refrigerator.

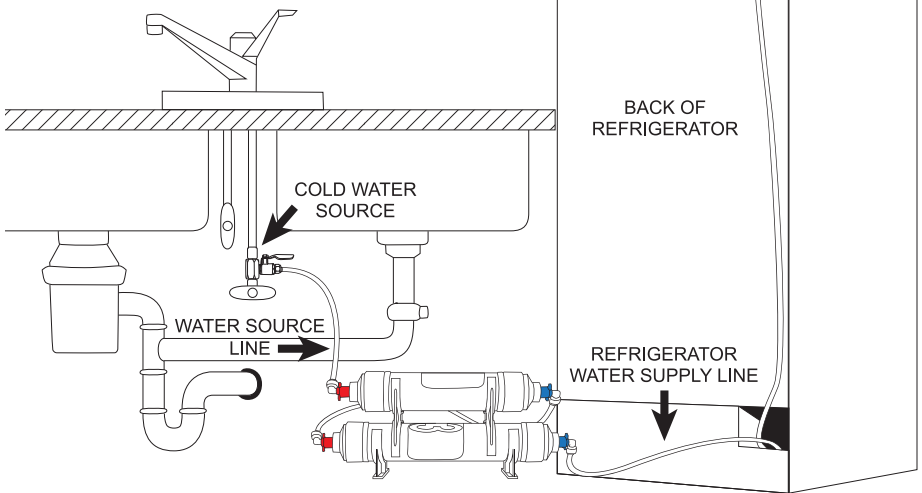

INSTRUCTIONS:

- 1 Turn off water source to refrigerator line
- 2 Cut refrigerator water supply line (may be copper or plastic)
- 3 Attach RED connector line to water source line using quick release connector
- 4 Attach BLUE connector line to refrigerator water supply line using quick release connector
- 5 Turn water source on and check for leaks
- 6 Filter brackets can be mounted to refrigerator with filter inserted in brackets or on floor. DO NOT pinch line when pushing refrigerator back in place

Small Tornado unit may be added to amplify oxygen in water, reduce bacteria in water line, and reduce odor.

Dream Tree Family

Tel: 1-888-618-5950 • Fax: 713-988-8839 • E-mail: support@DreamTreeFamily.com